



Gas Chromatography Analyzers

Weshine® is New Brand and Fast rising in the Electric Area. Relying on High-Quality product and Efficient after-sales service to win the trust of the customers. Weshine is your trusted manufacturer and supplier in China. Our Gas Chromatography Analyzers can help you to do the gas analysis works very well, especially the

after-sales service is Excellent. Looking forward to have a good and long partnership with you.

Weshine® Gas Chromatography Analyzers



Product Introduction:

Weshine® VS-9808 **Gas Chromatography Analyzers** specializes in the analysis of gases in transformer insulating oil. The **Gas Chromatography Analyzers** can analyze 7/9/11 kinds of gas components in the insulating oil through two or three chromatographic columns. If there are many oil samples needed to be tested, then

Weshine Electric Manufacturing Co., Ltd.

Address: Diangu Technology Center, No. 3088, Lekai North Street

Tel: +86-312-3188565

E-mail: sale09@weshineelectric.com

Phone: +86-18731260588

the Headspace Autosampler can help to extract the gases from the oil for the **Gas Chromatography Analyzers** . 27/72 Samples can be shocked and heated,and then transmit the gases automatically by the Autosampler. It can help the **Gas Chromatography Analyzers** a lot,and save labor cost and time cost.The software of the **Gas Chromatography Analyzers** is easy to operate,we can provide online video guidance and remote assistance.Please enjoy our 7days*24hours after-sales service.

Product Parameter:

| | |
|--------------------------|--|
| Operating display | 192*64 periodic lattice liquid crystal |
| Temperature control area | 6 ways |
| Temperature | 5℃~ 400℃ |
| Programming | Rate 0.1 ~ 39℃/min |
| External events | 4 ways |
| Detector | FID, TCD,ECD, FPD and NPD |
| Communication interface | Ethernet: IEEE802.3 |

Product Feature:

Gas Chromatography Analyzers mainly analysis the gases components from the transformer insulating oil.**Gas Chromatography Analyzers** works with the Air Generator,Hydrogen Generator, and Oscillator.

The Oscillator shocks and heats up the oil sample to get the gas from the oil. And then inject the gas sample into the **Gas Chromatography Analyzers**. Before that,we should use the Air Generator and Hydrogen Generator to fire the FID1 and FID2.The **Gas Chromatography Analyzers** will analysis the gas sample automatically, and you will see the gases components waves on the software on PC.The test report can be printed by the printer from the **Gas Chromatography Analyzers**.

Product details:


Weshine Electric Manufacturing Co., Ltd.

Address:Diangu Technology Center, No. 3088, Lekai North Street

Tel:+86-312-3188565

Phone:+86-18731260588

E-mail:sale09@weshinelectric.com

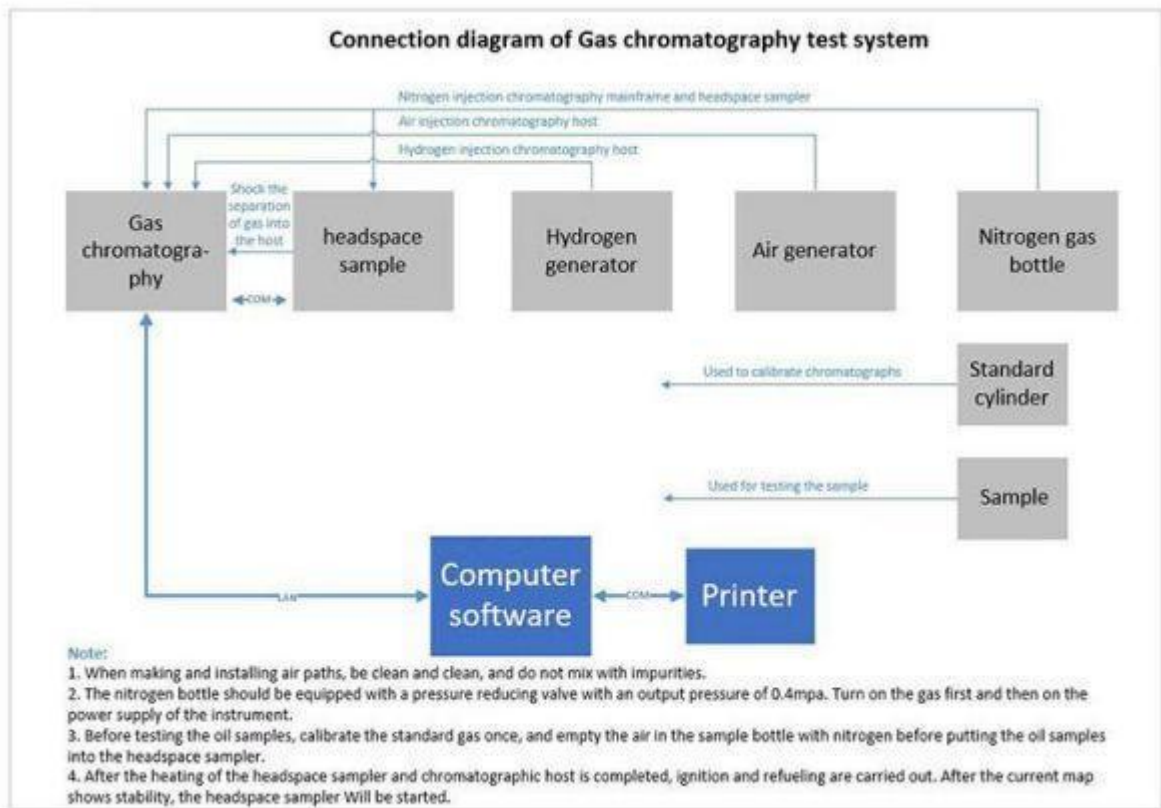

For Headspace Sampler:



The Autosampler can extract the gases from the insulating oils, and transmit the gases by carrier gas to the **Gas Chromatography Analyzers** Columns. It has the function of heating and shocking, instead of the manual oscillator.

Details of the Vials

| | |
|-----------------|--------------------------------|
| Number of vials | 27/72 |
| Vial Material | Neutral Glass |
| Vial volume | 20ml |
| Vial Septum | PTFE coated with butene rubber |

Weshine Electric Manufacturing Co., Ltd.

Address: Diangu Technology Center, No. 3088, Lekai North Street

Tel: +86-312-3188565

Phone: +86-18731260588

E-mail: sale09@weshineelectric.com

| | |
|-------------------|----------------------------------|
| | PTFE coated with silicone rubber |
| Vial Aluminum Cap | Aluminum |

For Oscillator:



The Oscillator heats and shocks the transformer oil to extract the gases from the transformer insulating oils automatically. The temperature and times can be set. Put the 40ml oils into the 100ml-injector, and then put 8 injectors at max into the oscillator to start the extraction works.

For Hydrogen Generator:

Weshine Electric Manufacturing Co., Ltd.

Address:Diangu Technology Center, No. 3088, Lekai North Street

Tel:+86-312-3188565

Phone:+86-18731260588

E-mail:sale09@weshineelectric.com



This Hydrogen Generator make the hydrogen for the **Gas Chromatography Analyzers**, the hydrogen can help to fire the FID1 and FID2.

For the Air Generator:

Weshine Electric Manufacturing Co., Ltd.

Address:Diangu Technology Center, No. 3088, Lekai North Street

Tel:+86-312-3188565

E-mail:sale09@weshineelectric.com

Phone:+86-18731260588



The Air Generator provides the air for the **Gas Chromatography Analyzers** to help the Hydrogen firing.

Packing:

Weshine Electric Manufacturing Co., Ltd.

Address: Diangu Technology Center, No. 3088, Lekai North Street

Tel: +86-312-3188565

Phone: +86-18731260588

E-mail: sale09@weshineelectric.com



Contact us

| | |
|--|---|
| FEEL FREE TO MAKE A PHONE CALL:400 996 1868 | OR E-MAIL TO: info@weishengelectric.com |
| SALES OFFICE Weshine Limited 602, Building 3, Diangu Technology Center, No. 3088, Lekai North Street W/app: +86 1873 1260 588 E. info@weishengelectric.com sale01@weishengelectric.com | CONTACT OFFICE T. 0312 3188565 E. bdweisheng@weishengelectric.com AFTER-SALES SERVICE T. +86 157 1252 6062 |